

KID SAFE DECK GUARD

Model 4500

INSTALLATION INSTRUCTIONS

The Kid Safe Deck Guard is a strong, durable net that provides a safety barrier between a child and the railing. It attaches to the railing with cable ties. You will need a pair of scissors to cut the net to length and to cut the ends off of the cable ties once they are installed.

STEP 1: Measure the deck/porch rail to be covered and trim net to fit. Be sure to allow the net to overlap the end post by 2" if cable ties will be used to go around the post. If the rail ends at a wall or end post that the cable ties will not fit around, see instruction for attaching net to an end wall.


STEP 2: Starting at one the end of the railing, overlap the net 2 inches onto the end post. Attach the net at the top by passing a cable tie through the net and around the post and pulling it tight. Adjust the net on the end post so that it either overlaps the horizontal top rail or fits tightly underneath the top rail. With the net in position, finish attaching it to the end post at the bottom and two evenly spaced places in between with the cable ties.

STEP 3: Measure out about 8 inches from the end post/wall and attach the top of the net to the top railing if you overlapped the net. If the top of the net is below the top rail, then attach the net to the nearest vertical rail. Attach the net at the top and the bottom about every 8 inches along the rail.

End wall / End Post Attachment

If the rail ends at a wall or end post that cable ties will not fit around, use the enclosed eye screws to attach the net. Screw in one eye screw at the top and the bottom of the post or wall and two evenly spaced places in between as shown. With the screw eyes secured, attach the net to them with the cable ties.

Proceed to step 3.

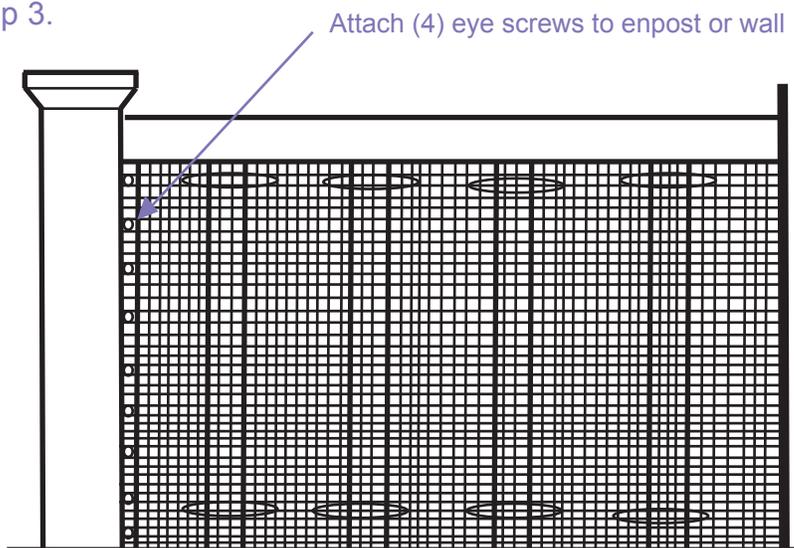

This product is not a substitute for adult supervision.

Questions - Please call 1-800-845-9236 or vist www.kidkusion.com