



# No Scratch Door Guard

**INSTALLATION INSTRUCTIONS** (Optional screw attachment on back)


**#5584**

**THANK YOU:** For purchasing the Scratch Guard. Please read all instructions before installing it.

**TOOLS NEEDED:** Pencil, Straight Edge, Scissors, Rubbing Alcohol, Cleaning Cloth

**For Door widths less than 33" proceed to Step #1 – For door widths greater than 35" proceed to Step #3**

**Step #1** Hold Scratch Guard against door. Line it up with bottom and left side of door. Using pencil, mark Scratch Guard on right side at width of door at top and bottom. (Figure 1)

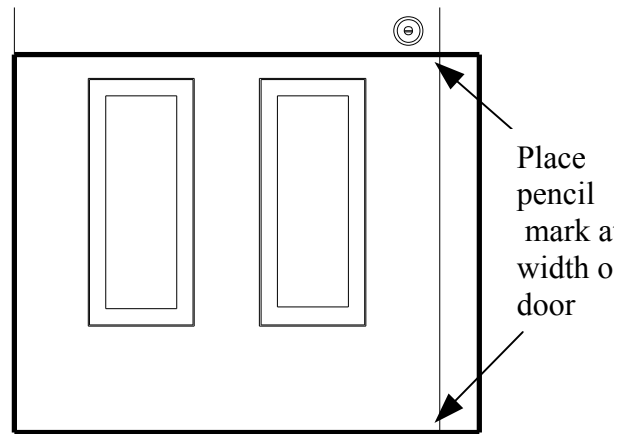


**Step #2** Lay Scratch Guard on paper backing on flat surface. Using straight edge and pencil, draw a line between the two marks. Using scissors, cut along the line marked on Scratch Guard.

**Step #3** Hold Scratch Guard against door to make sure it fits properly. If it is wider than door, use scissors to trim to correct width. (Figure 2)


**Step #5** With Scratch Guard cut to proper size, use scissors to round off each of the corners. The rounded corner should be approximately the size of a Nickel coin. (Figure 3)

**Step #6** Lay Scratch Guard down on paper backing on a flat surface. Use rubbing alcohol to clean areas where tape will be applied on both Scratch Guard and door so that tape squares will bond securely to both surfaces. Remove adhesive tape squares one at a time and place on Scratch Guard as shown. Be sure to apply pressure when attaching tape squares. (Figure 2)

**Step #7** With tape squares attached, hold Scratch Guard against door and center it on door. While holding Scratch Guard in place, remove backing from adhesive square in top left hand corner and press it against door. Attach remaining tape squares to door in the numbered order as shown. (Figure 2)

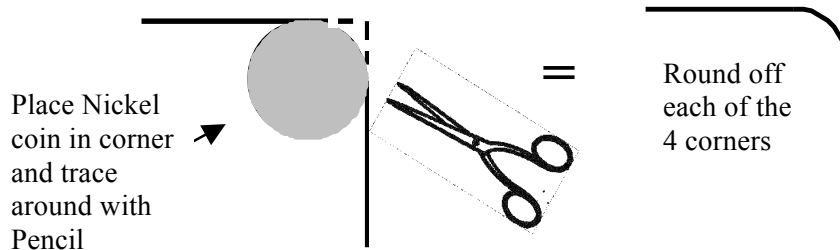

**Fig. 3**

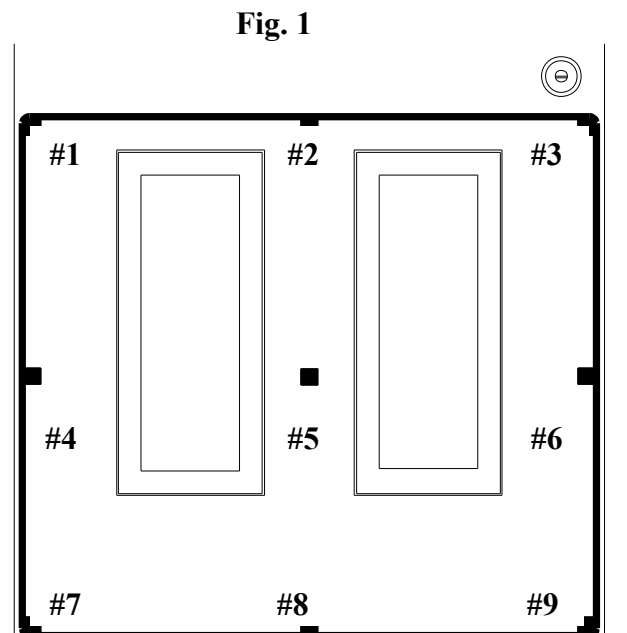

**Fig. 2**

**ADDITIONAL TOOLS NEEDED: Power Drill, Phillips Head Screw Bit, Scotch Tape, Tape Measure, 1/16" Drill Bit**

**Note:** Attachment screws have been included for those that would prefer to attach the Scratch Guard with screws instead of the adhesive tape squares.


**Step #1** Complete steps #1 thru #5 on front page to cut Scratch Guard to proper size.

**Step #2** Lay Scratch Guard down on paper backing on a flat surface. Using tape measure and pencil, place a pencil mark 3/8" in from each side of corners. Using tape measure, find center of the height of Scratch Guard and place a pencil mark 3/8" in from each side. Using same method, place a pencil mark 3/8" in from top in center of Scratch Guard and 3/8" up from bottom in center. Place pencil mark in center of Scratch Guard. (Figure 1)


**Step #3** Hold Scratch Guard against door and center it on door. Place a piece of Scotch Tape in the top left hand and right hand corners to hold Scratch Guard in place or have someone else hold it for you.

**Step #3** Starting in top left hand corner, drill 1/16" pilot hole thru the Scratch guard and into door approximately 3/4" deep. Place plastic washer on screw and screw into pilot hole. (Figure 2)

**Step #3** Repeat Step #4 for each of the other 9 locations as shown in the numbered order.

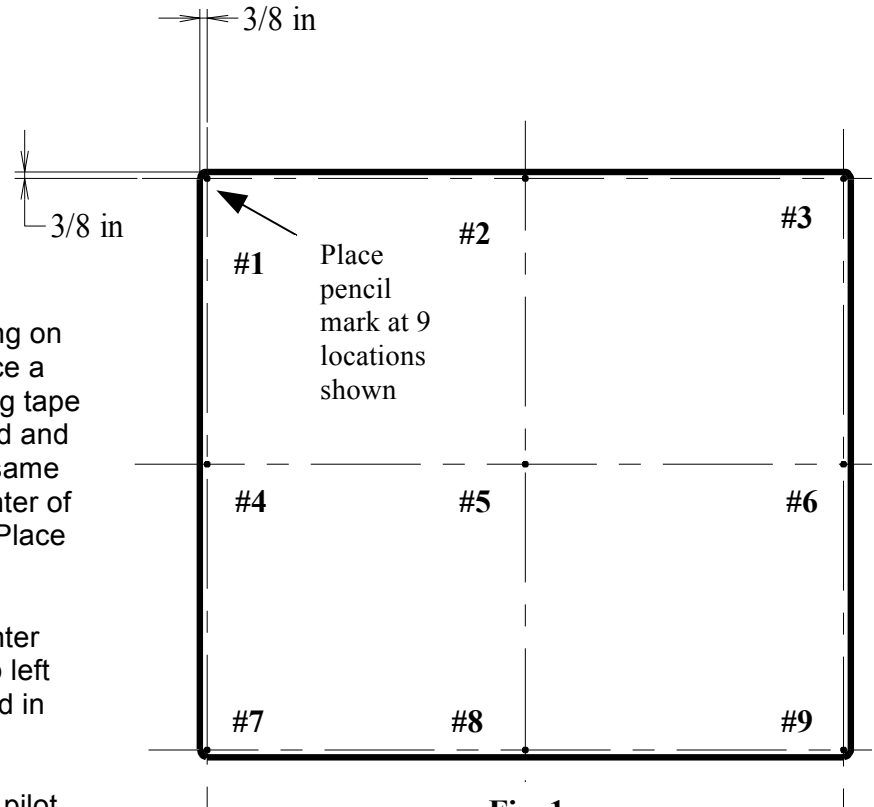

**Fig. 1**

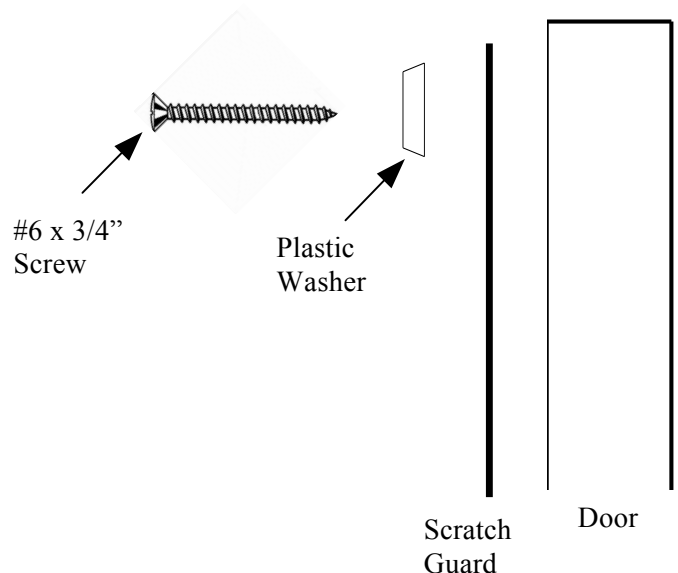

**Fig. 2**